

# Agilent InfinityLab Flex Bench MS System



# **Product description**

Optimize your whole lab setup. The InfinityLab Flex Bench MS allows you to keep your InfinityLab LC/MSD Series and Ultivo LC-TQ systems in one stack with easy access to all areas. It Improves lab environments with a gas cartridge holder, an integrated solution for waste management and a Quiet Cover to reduce pump noise.

| Product Name   | InfinityLab Flex Bench MS system  |
|----------------|---|
| Dowt Name base | G6015A InfinityLab Flex Bench MS, without power strip (only available in Asia-Pacific)  |
| Part Numbers   | G6015B InfinityLab Flex Bench MS, with power strip (not available in Asia-Pacific)  |
| Intended Use   | The InfinityLab Flex Bench MS is designed for use with Agilent HPLC modules and InfinityLab LC/MSD Series and Ultivo (LC-TQ). Storing other instruments or materials has not been tested, and is not supported. |
| Accessories    | See Component overview section  |

#### **Physical specifications**

| Dimensions (depth × width × height) | See dimensions on page 3  |  |
|-------------------------------------|---|--|
| Weight                              | 55 kg (unloaded)  |  |
| Material                            | Stainless steel, aluminum, carbon steel, plastic, epoxy powder coat |  |

#### **Operational specifications**

| Max. Load Per LC Shelf | 50 kg  |
|------------------------|--------|
| Max. Load Per MS Shelf | 90 kg  |
| Max. Load Overall      | 200 kg |

# Design characteristics/product capabilities

|                               | Conforms to applicable requirements of laboratory bench, as stated in the Agilent Instrument<br>Site Preparation Checklists for 1100/1200/1260 Infinity/1290 Infinity/1260 Infinity II/1290<br>Infinity II Series LC Instruments and the Ultivo LC-TQ Site Prep Guide and HW Site Prep Checklist. |
|-------------------------------|---|
| Overall/General               | <ul> <li>Allows installation and correct operation of the LC instrument according to the Infinity II LC<br/>System Installation Guide if positioned on an even floor.</li> </ul>  |
|                               | <ul> <li>Allows installation and correct operation of the Ultivo LC-TQ system according to the<br/>Site Preparation Guide and Hardware Site Prep Checklist.</li> </ul>  |
|                               | <ul> <li>The InfinityLab Flex Bench MS is delivered unassembled, and requires assembly according to<br/>instructions.</li> </ul>  |
|                               | • Designed for indoor movement on hard, even and leveled surfaces (laboratory environment).   |
|                               | Stability tested according to 61010-1 IEC:2010 section 7.4.   |
|                               | Manual locking bolts prevent shelves from being released without intent.  |
| LC Shelves                    | Fixed in horizontal position by grids.  |
|                               | Front lip on LC shelves and locking buttons keep LC modules in position.  |
|                               | • Extendable  |
| MSD Shelf                     | Operation according to FB-MS Installation and Operation Instructions  |
| Uprights                      | • 55 grids for LC shelf positioning with 2 cm grid space  |
| Casters                       | • 4x casters with integrated leveling pads; manual operation through a ratcheting mechanism   |
|                               | • Height adjustable   |
| Handles                       | • 200 mm grip length  |
| Gas Filter Cartridge Holder   | Allows vertical mounting of two gas filter cartridges   |
|                               | Specially designed safety basin   |
|                               | Attachable to side pillars  |
| Waste Bin                     | • Material: HDPE  |
|                               | <ul> <li>Can host a 5 L waste can with GL38 threaded InfinityLab Stay Safe Cap with four ports and<br/>charcoal filter, plus MS source waste bottle.</li> </ul>   |
|                               |   |
| Power Strip                   | Designed for use with IEC power cords.  |
| (available with Flex Bench MS | All metal housing   |
| G6015B only)                  | • 1x IEC 320 - C14 inlet and 8x IEC 320 - C13 outlets   |
| ,,                            | • 10 A, 230 VAC circuit breaker   |
|                               |   |

# **Component overview**

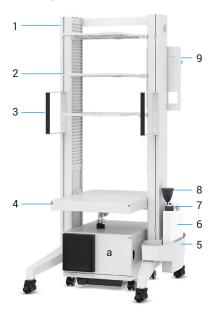


 Table 1. Components included with Flex Bench MS system.


| No. | Description   | Comment                           | Part No. for Reordering |  |  |
|-----|---|-----------------------------------|-------------------------|--|--|
| 1   | Main assembly (leg section, uprights, casters, and connection bridge) |                                   | NA                      |  |  |
| 2   | Shelf for LC modules  | Comes with three each             | 5043-1750               |  |  |
| 3   | Handles, adjustable   |                                   | NA                      |  |  |
| 4   | MSD shelf   |                                   | NA                      |  |  |
| 5   | Waste tray  |                                   | NA                      |  |  |
| 6   | Waste container (5 L)   |                                   | 5043-1986               |  |  |
| 7   | Stay Safe cap GL38, 4-port kit  |                                   | 5043-1695               |  |  |
| 8   | Charcoal filter   |                                   | 5043-1193               |  |  |
| 9   | Gas Filter Cartridge Holder   |                                   | NA                      |  |  |
|     | Other parts included (not shown in picture)                           |                                   |                         |  |  |
|     | Elbow connector 90°, 1 in NPT to 1 in Barb PP                         | Connector for MS waste drain      | 5043-1988               |  |  |
|     | NW 25 hinged clamp  |                                   | 0100-1398               |  |  |
|     | NW 25 centering ring with O-ring                                      |                                   | 0100-1551               |  |  |
|     | MS waste container  |                                   | 5043-1987               |  |  |
|     | Power cord  | G6015B only, comes with four each | 8121-2258               |  |  |

 Table 2. Optional accessories for Flex Bench MS system.

| Letter | Description                   | Part No.  |
|--------|-------------------------------|-----------|
| а      | Quiet Cover MS, for MS40 pump | G6011B    |
|        | Drawer                        | 5043-1735 |
|        | Tray                          | 5043-1725 |

| Dimension | Comment                          | Value    |
|-----------|----------------------------------|----------|
| А         | Width                            | 780 mm   |
|           | Width, including waste container | 880 mm   |
| В         | Depth                            | 850 mm   |
|           | Depth, with MS shelf extended    | 1,410 mm |
| С         | Height (floor to top)            | 1,675 mm |
| D         | Distance between pillars         | 470 mm   |
| F         | MSD shelf depth                  | 690 mm   |
| E         | MSD shelf extension distance     | 640 mm   |
| F         | LC shelf width at front          | 370 mm   |
| G         | LC shelf depth                   | 460 mm   |
| Н         | MSD shelf level above floor      | 550 mm   |

# **Dimensions**

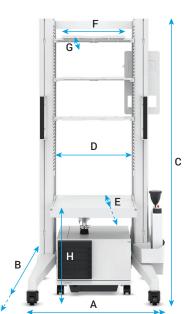

# Applicable manufacturing, safety, and operational regulations

#### **Quality statement**

This product is designed and managed under a Quality Management System registered to ISO9001.

## Applicable certifications for power strip (G6015B only)

Standards UL60950 and CSA C22.2 No. 60950, CSA certified, Standards C22.2 (No. 21-95 and No. 42-99), TÜV-GS certified, Standards EN60335-1 and EN60950-1, CE certified Registration number: AN 72031916 0001, cULus listed

## www.agilent.com/chem

DE44303.4805324074

This information is subject to change without notice.

